
RD-ES46 Exploded view

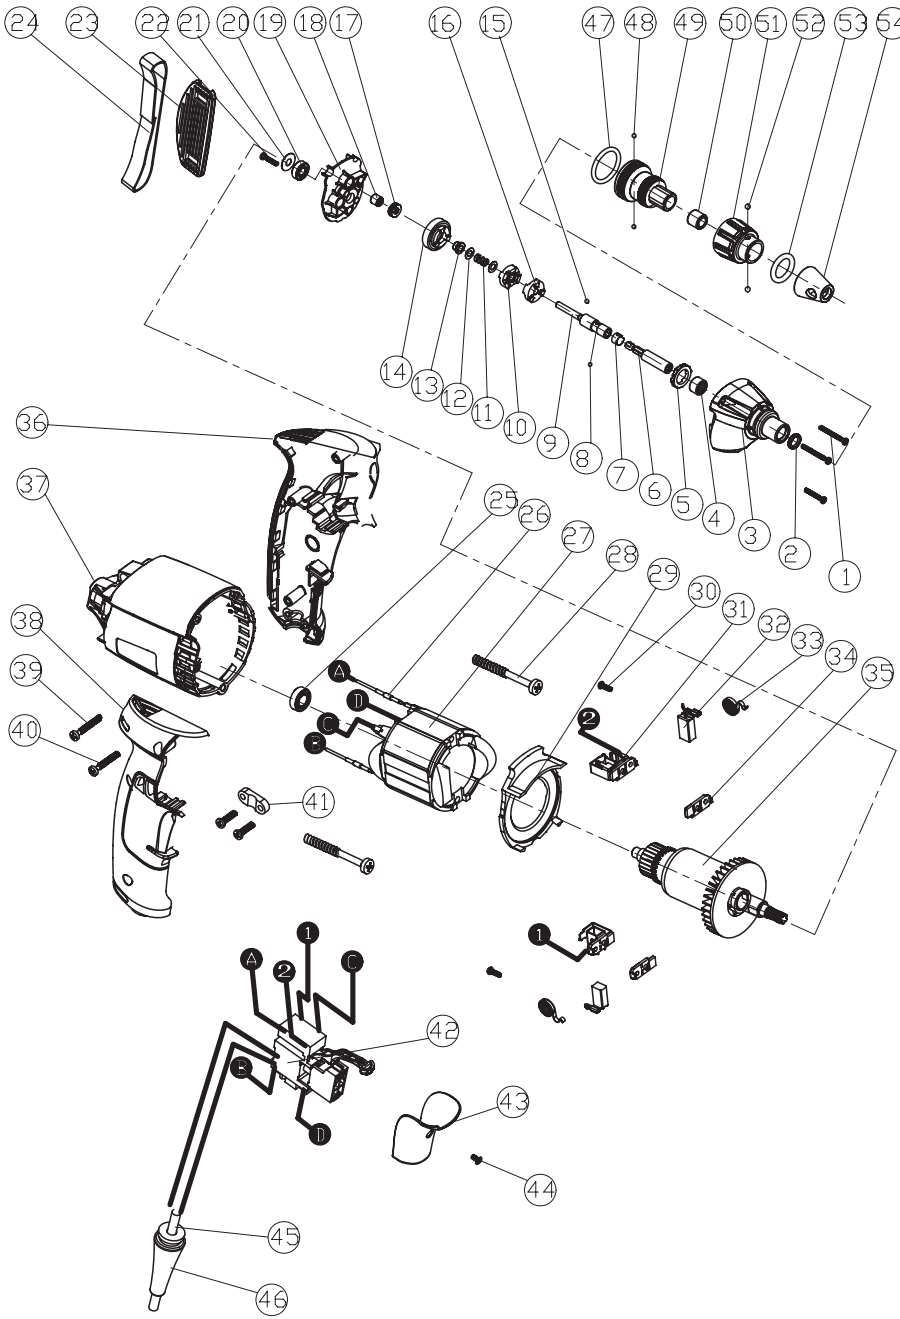

RD-ES46 Spare parts list

No.	Description	Qty.
1	ST screw	3
2	seal ring	1
3	gear housing	1
4	needle bearing	1
5	catch disk	1
6	Bit-holder	1
7	Bit-lock ring	1
8	ball%%C3.5	1
9	output spindle	1
10	clutch-I	1
11	spring	1
12	washer	2
13	slide bearing	1
14	output gear	1
15	ball%%C3	1
16	clutch-II	1
17	thrust bearing	1
18	needle bearing	3
19	bearing seat	1
20	ball bearing	1
21	seal washer	1
22	ST screw	3
23	Hand strap pad	1
24	Hand strap	1
25	ball bearing	1
26	Choke	2
27	stator	1

No.	Description	Qty.
28	STscrew	2
29	Baffle plate	1
30	STscrew	2
31	brush holder	2
32	brush	2
33	brush spring	2
34	holder support	2
35	rotor	1
36	left handle	1
37	motor housing	1
38	right handle	1
39	ST screw	3
40	ST screw	1
41	Cord clamp	1
42	switch	1
43	knob	1
44	screw	1
45	power cord	1
46	Cord guard	1
47	O-ring	1
48	ball	2
49	Nozzle base	1
50	bush	1
51	Nozzle cover	2
52	ball	1
53	O-ring	1
54	Nozzle tip	1